



ASSEMBLY INSTRUCTION





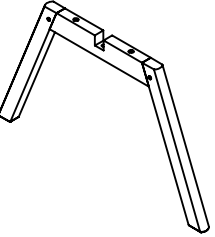

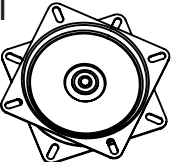




ALISON ARM CHAIR


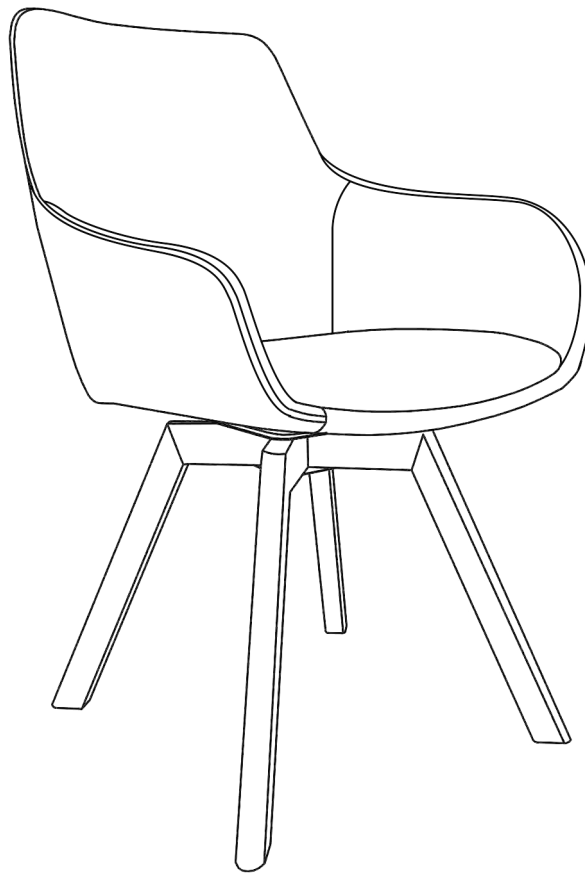


ROWICO

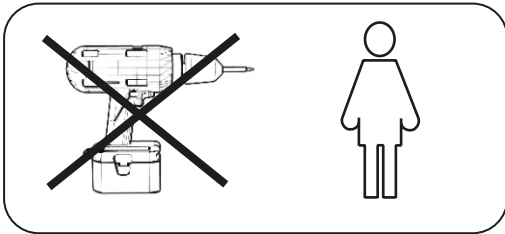HOME

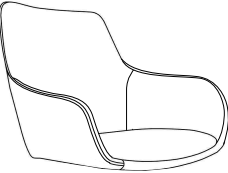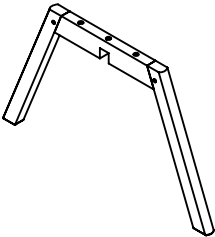

Ax1 	Ex1 
Bx1 	Fx8  M6x16MM
Cx1 	Gx2  M6x20MM
Dx1 	Hx2  M6x25MM
	Ix1  M6x55MM
	Jx1  N5
	Kx4  40x19MM

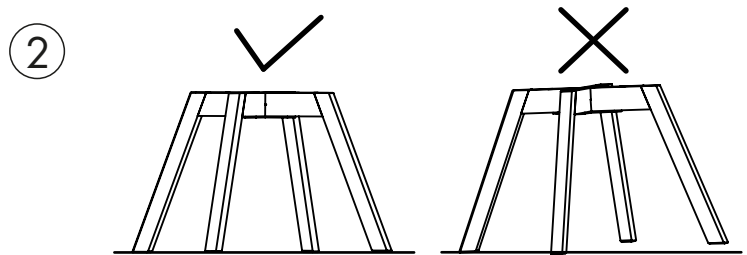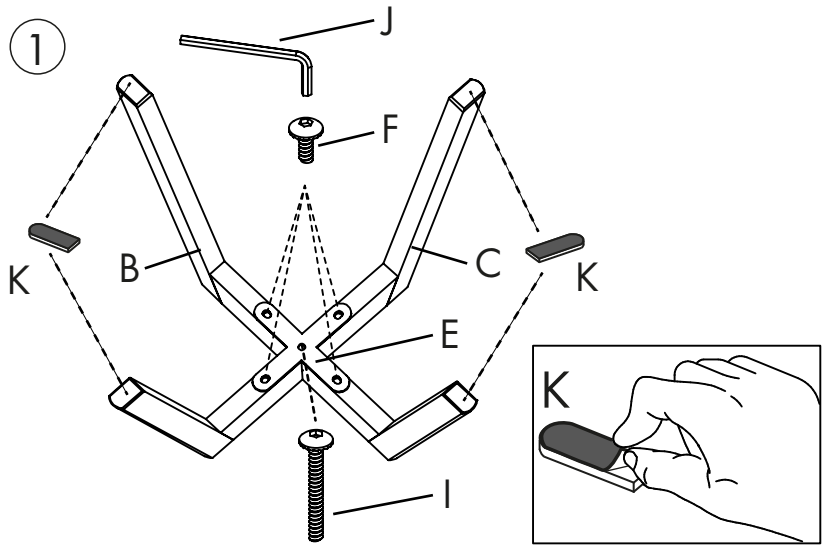

Placera stolen på ett jämnt underlag.
Justera tills samtliga ben är i nivå med underlaget.
Spänn sedan försiktigt samtliga skruvar.
Place the chair on an even surface.
Adjust until all legs are in level with surface.
Carefully tighten all screws.

